
FORGE
TOOLS AND HARDWARE


www.forgetools.net

Shower Support Bars Only
Code NO. **SBB-21-1200**


Fit for glass size: 8-10mm thickness
Non glass cut out requested

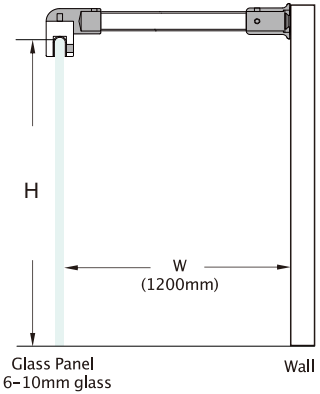


Step 1
Measure the glass panel high (H) and distance (W) the glass panel from the wall and drill the screw hole for the shower bracing bar on the wall.






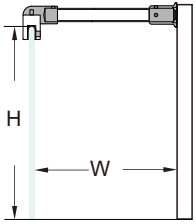


Step 2
Set up the base the shower bracing bar on the top of glass panel and fixed other side of the shower bracing bar to the wall.

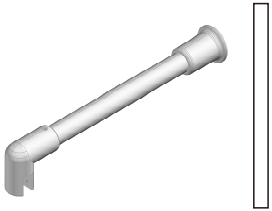

Step 3
Adjust the shower bracing bar and let the glass panel to the right distance (W) to the wall.

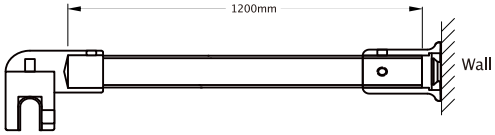

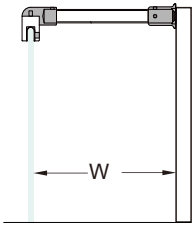

Tools required to install:
Spirit Level, Measuring tape,
Power drill, Allen key set,
Philips screwdriver,
Plastic wedges and
8 -10 mm drill bit for stone.



Please see safety instructions on power drill before starting assembly

Email: info@forgetools.net **www.forgetools.net**